



TYPICAL LAB DISPENSING INSTALLATION

USE 100+ SERIES, TXF SERIES, or PPVM SERIES WHEN LARGER VOLUMES OF WATER ARE NEEDED. OBSERVE PRETREATMENT REQUIREMENTS

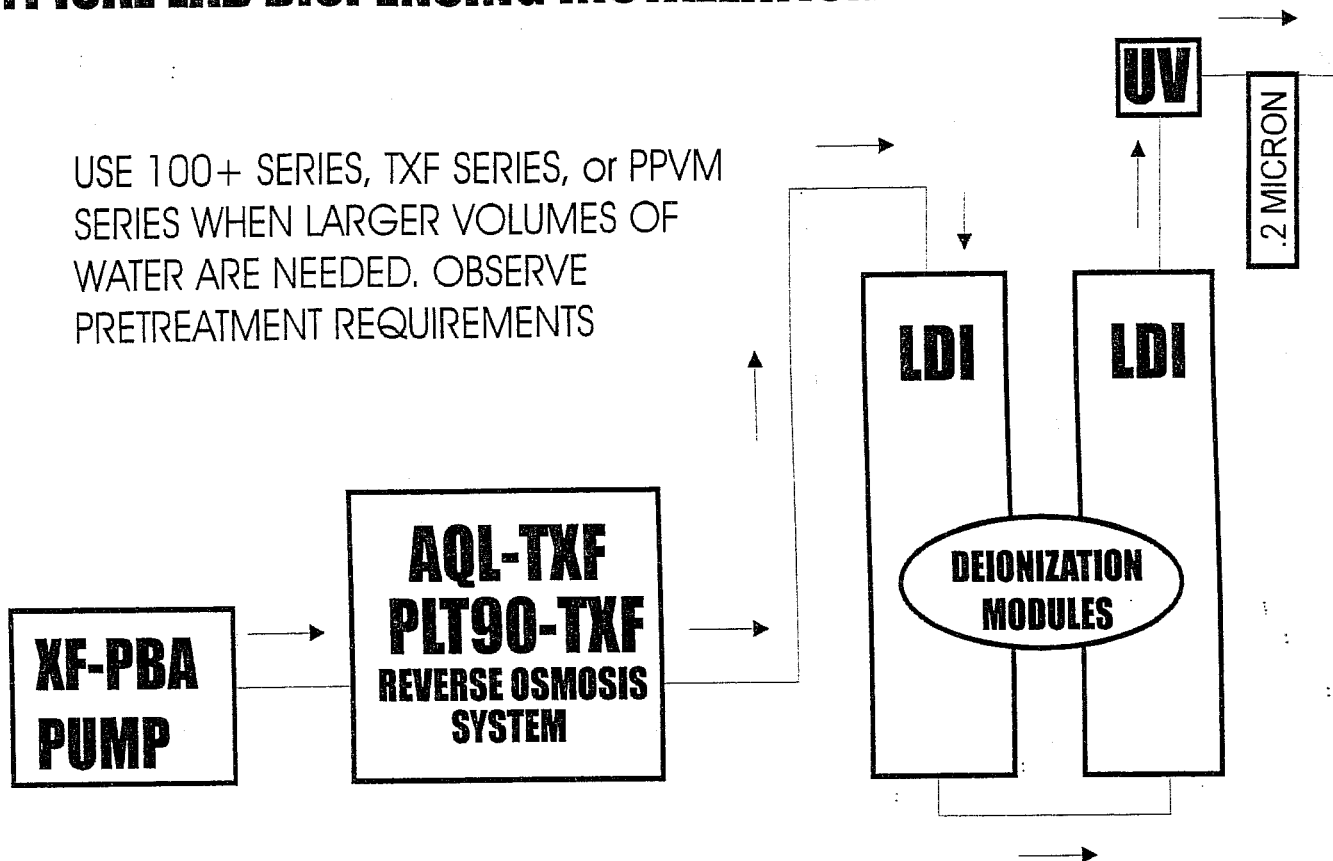

TYPICAL INSTALLATION

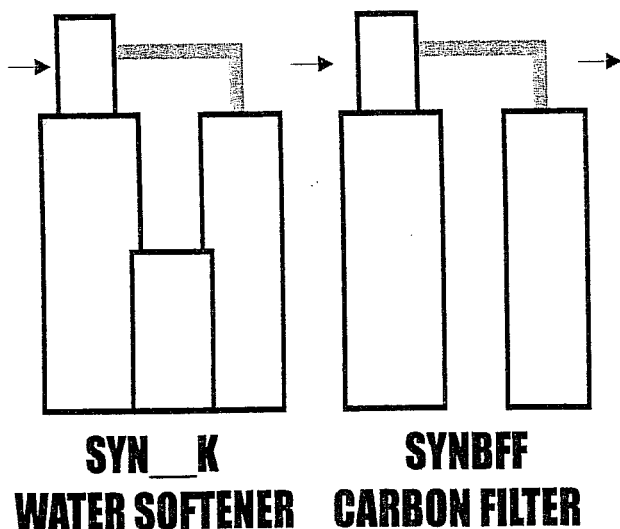

TYPICAL LAB DISPENSING INSTALLATION

USE 100+ SERIES, TXF SERIES, or PPVM SERIES WHEN LARGER VOLUMES OF WATER ARE NEEDED. OBSERVE PRETREATMENT REQUIREMENTS

