

Exclusive patented technology



 6 Patent for invention International leading technology, green, safe and efficient

BDD diamond production technology of superoxygenated water

Non-pollution

Non-toxic

No residue



Only adding water



99.999% Strong sterilization



No residues



No chemical additions



Gentle and non sticky



Exclusive patented technology

• As long as water is added, it can become disinfectant

Just adding ordinary water, you can make environmentally friendly, non-toxic and chemical-free disinfectant anytime and anywhere. It can be used for sterilization and disinfection in family life, clothing, food, housing and transportation, etc.





Super strong bactericidal factor, comprehensive sterilization

Different from the traditional physical packaging principle, it can kill more than 99.999% of pathogenic microorganisms within 60 seconds

 Small equipment plays a big role in blocking the spread of germs

Most bacteria and viruses are transmitted through air and contact, and the main control method of contact transmission is to spray disinfectant and kill the germs on surface of objects.





 Sterilization without residue, care for the healthy growth of the baby

Effectively kills all kinds of pathogenic bacteria that babies often come into contact with in the growing environment

• Small and lightweight, create a clean space anytime and anywhere





• Wide range of use, can be used in many scenarios



Furniture disinfection



Refrigerator disinfection and deodorization



Tableware disinfection



Disinfection of toiletries



Disinfection of meat and seafood



Remove pesticide residues

Steps for usage

1. Charging Instrument

Please use the DC5V USB charger to charge the instrument, the blue light of the water tank is always on, indicating that the instrument is fully charged



And Contraction of the second second

2. Add water into bottle

Remove the transparent cover on the instrument, turn the water tank cover counterclockwise to pour 20ML of water directly into the water tank, and then turn the tank cover back clockwise

Tips: In order to ensure the disinfection effect, spray the instrument at the object and wait for 30-60 seconds. The longer the waiting time, the better the sterilization effect.

3. Water is activated

Press and hold the button for two seconds, the blue light of the water tank will light up, activate the BDD diamond module, and start making disinfectant for 60 seconds. Please wait patiently for the blue light to go out.





4. Start using sanitizer


Press the spray switch to generate a disinfectant spray, and the effect of continuous pressing of the spray is better

Ozone Water Makeup Remover



Model No.:	BBD-02
Charging Mode:	USB Charging/Type C
Battery:	400Mah
Voltage:	3.7V
Water Tank:	10ML
N.W.:	80g
Dimension:	/

Portable Ozone Water Sprayer

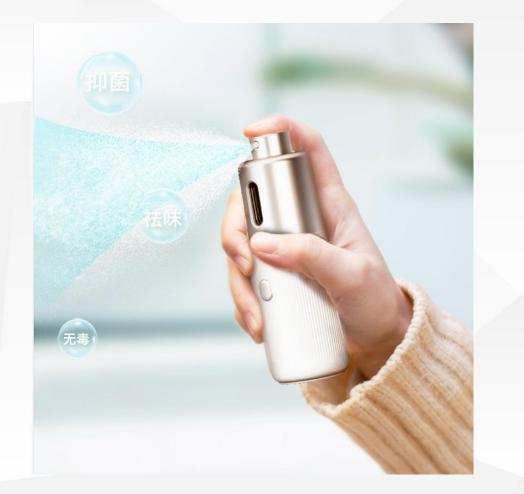

Model No.:	BBD-03
Charging Mode:	USB Charging/Type C
Battery:	400Mah
Voltage:	3.7V
Water Tank:	15ML
Ozone Content	2.5PPM
N.W.:	100g
Dimension:	40*40*118mm

Portable Ozone Water Sprayer



Model No.:	BBD-04
Charging Mode:	USB Charging/Type C
Battery:	600Mah
Voltage:	3.7V
Water Tank:	25ML
Ozone Content	1.35PPM
N.W.:	130g
Dimension:	42**42*136mm

Ozone Water Sterlizier




Model No.:	BBD-05
Charging Mode:	USB Charging/Type C
Battery:	3600Mah
Voltage:	3.7V
Water Tank:	550ML
Ozone Content	3.5PPM
N.W.:	420g
Dimension:	103*115*260mm

Ozone Water Oral Rinse



Model No.:	BBD-06
Charging Mode:	USB Charging/Type C
Battery:	600Mah
Voltage:	3.7V
Water Tank:	300ML
Ozone Content	0.3PPM
N.W.:	/
Dimension:	70*70*110mm

Ozone Water Vegetable Fruit Purifier

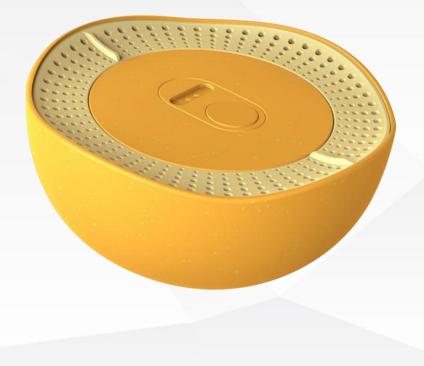

Model No.:	BBD-07
Charging Mode:	USB Charging/Type C
Battery:	1800Mah
Voltage:	3.7V
Waterproof:	IPX7
Ozone Contet	1PPM
N.W.:	/
Dimension:	113*113*58mm

Ozone Water Vegetable Fruit Purifier



Model No.:	UFO(BBD-08)
Charging Mode:	USB Charging/Type C
Battery:	1800Mah
Voltage:	3.7V
Waterproof:	IPX7
Ozone Content	1PPM
N.W.:	/
Dimension:	/

