

# Update on Emerging Contaminants: 1,4-Dioxane

Advanced Oxidation Processes

1,4-Dioxane is a semi-volatile, colorless liquid with a mild ethereal odor, also known as diethylene dioxide, dioxane, or p-dioxane. It is miscible with water, oils and most chlorinated solvents. It is also flammable and, during storage, may form explosive peroxides.

## SOURCES OF 1,4-DIOXANE

1,4-Dioxane is primarily used as a stabilizer in chlorinated solvents. At one time, approximately 90% of the 1,4-dioxane produced went into the production of 1,1,1-trichloroethane (TCA). This application has now been phased out due to TCA's destructive effects on atmospheric ozone. Industries or processes in which 1,4-dioxane is used, or is associated, include:

- Chlorinated solvents manufacturing (as a stabilizer)
- Organic chemical manufacturing
- Textile processing
- Paper manufacturing
- Varnish stripper and paint production
- Pesticide production

When released into the air, 1,4-dioxane degrades relatively quickly through reactions with photochemically-produced hydroxyl radicals. However, degradation in water and soil is slow. For this reason, 1,4-dioxane is persistent in the environment, and will remain present in areas of groundwater contamination. Due to the ubiquitous nature of 1,4-dioxane, contamination can be found in many parts of the U.S.

## A PROBABLE CARCINOGEN

The United States Environmental Protection Agency's (USEPA) Integrated Risk Information System (IRIS) released a toxicological review of the contaminant to include a cancer assessment. IRIS designated 1,4-dioxane as "likely to be carcinogenic to humans". In addition, the IRIS system

indicated that 1,4-dioxane concentrations of 0.35 ppb (ug/L) or higher in drinking water would result in 1 in 1,000,000 people developing cancer. In animal testing, 1,4-dioxane increased the incidence of cancer in the liver, lungs, gall bladder, and on the skin.

Non-carcinogenic side effects of 1,4-dioxane include liver and kidney toxicity. The primary routes of human exposure to 1,4-dioxane are inhalation, ingestion, and dermal contact.

## OCCURRENCE IN THE U.S.

The USEPA included 1,4-dioxane on its third Unregulated Contaminant Monitoring Rule (UCMR3) for drinking water contaminants. Levels of 1,4-dioxane were monitored at 800 water treatment plants across the U.S. between 2013 and 2015.

**CHEMICAL NAME:** 1,4-DIOXANE

**CHEMICAL FORMULA:**  $C_4H_8O_2$

**MOLECULAR WEIGHT:** 88.12

**WATER SOLUBILITY:** HIGHLY SOLUBLE

**DENSITY:** 1.033 G/ML

**VOLATILITY:** SEMI-VOLATILE

Results of the UCMR3 initiative shows that over 20% of treatment plants tested had at least one sample measure above the USEPA established reporting limit concentration of 0.07 ppb. In addition, over 7% of sites had at least one sample measure above the 0.35 ppb 1 in 1,000,000 cancer risk limit.

Figure 1 provides a detailed heat map showing the occurrence of 1,4-dioxane samples testing above the 0.07 ppb reporting limit across the U.S. The data shows expectedly high concentrations in highly industrialized regions.

## ULTRAVIOLET (UV) LIGHT KEY TO TREATMENT PROCESS

1,4-Dioxane's low vapor pressure and high solubility render air stripping, carbon adsorption and reverse osmosis ineffective for its removal.

However, UV-oxidation using UV light and hydrogen peroxide is effective at breaking down 1,4-dioxane. The irradiation of hydrogen peroxide by UV light generates hydroxyl radicals. These radicals effectively oxidize 1,4-dioxane, breaking it down into non-toxic molecular components.

## EXTENSIVE UV INSTALLATIONS

TrojanUV has conducted numerous pilot studies to verify the efficacy of 1,4-dioxane destruction using UV light and hydrogen peroxide. Currently, Trojan has dozens of surface and groundwater UV-oxidation installations designed for its removal. Collectively, these installations treat over 380 million gallons of water each day.


## TREATING MULTIPLE CONTAMINANTS WITH ONE UV SYSTEM

As an added benefit to 1,4-dioxane treatment, TrojanUV's UV-oxidation systems also disinfect providing up to 6-log removal of pathogenic microorganisms including *Cryptosporidium*, *Giardia*, and viruses including adenovirus and treat for other chemical contaminants including *N*-nitrosodimethylamine (NDMA), endocrine disruptor compounds, pesticides, volatile organic compounds (VOCs), and taste and odor causing compounds such as MIB and geosmin.

For more information regarding the treatment of multiple contaminants using TrojanUV's UV-oxidation solutions, including 1,4-dioxane treatment, please contact TrojanUV.

**References:** National Toxicology Program: 12<sup>th</sup> Report on Carcinogens, 2011; EPA Toxic Release Inventory, 2009; EPA Integrated Risk Information System (IRIS); USEPA Unregulated Contaminant Monitoring Rule 3 Occurrence Data, 2017

*We hope this fact sheet has answered some of the questions you might have related to 1,4-dioxane treatment. Don't hesitate to reach out if you have any other questions, feedback or suggestions.*

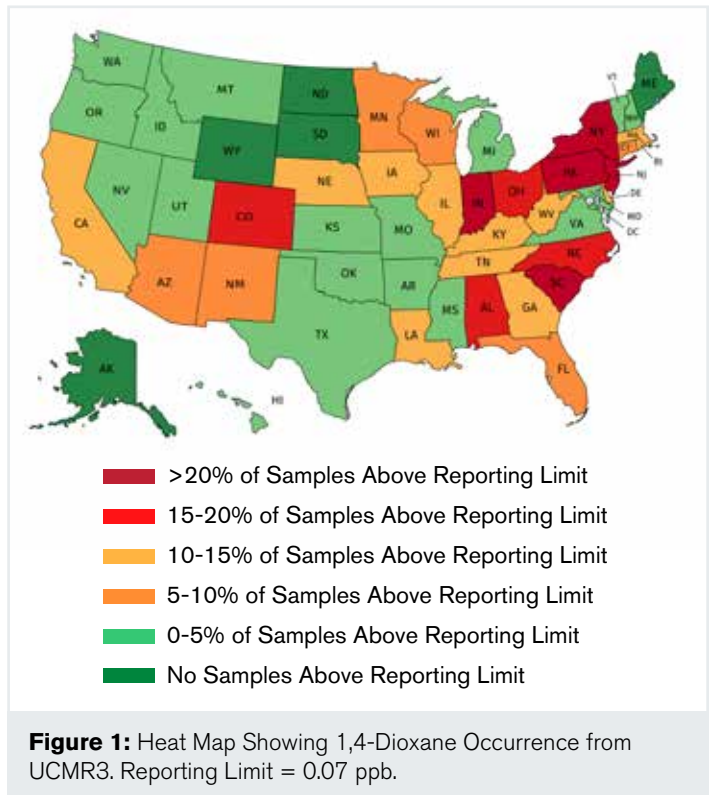

**Figure 2.** TrojanUVPhox™ system treating 1,4-dioxane

**TrojanUV is part of the Trojan Technologies group of businesses.**

**Head Office (Canada)**  
3020 Gore Road London, Ontario, Canada N5V 4T7  
Telephone: (519) 457-3400 Fax: (519) 457-3030

**www.trojanuv.com**

**Trojan Technologies Deutschland GmbH**  
Aschaffener Str. 72, 63825 Schöllkrippen, Germany  
Telephone: +49 (0) 6024 6347580 Fax: +49 (0) 6024 6347588

For a list of our global offices, please visit [trojanuv.com/contactus](http://trojanuv.com/contactus).

The products described in this publication may be protected by one or more patents in The United States of America, Canada and/or other countries. For a list of patents owned by Trojan Technologies, go to [www.trojan technologies.com](http://www.trojan technologies.com).

Copyright 2019. TrojanUV - A Division of Trojan Technologies Group ULC. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means without the written permission of Trojan Technologies. (0419)

**TROJAN UV**  
A TROJAN TECHNOLOGIES BUSINESS